

PHASETEK INC.

2011

PRODUCT LIST

**PHASETEK INC.**  
550 CALIFORNIA ROAD - UNIT 11  
QUAKERTOWN, PA 18951  
PHONE: (215) 536-6648  
FAX: (215) 536-7180

**MICA CAPACITORS**

<u>TYPE</u>	<u>CAPACITANCE (UF)</u>
AT	.01
AK	.01
291	.0001-.001
291	.0011-.002
291	.0022-.0039
291	.004-0.10
292	.0001-0.10
293	.0001-.0005
293	.00051
293	.00056-.0033
293	.0034-.0056
293	.006-.0082
293	.0083-0.10
294	.0001-.0013
294	.0015-.0033
294	.0034-.0039
294	.0043
294	.004
294	.0051-.0056
294	.0062-.1

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P200-086	HOLD DOWN PLATE, 17kV & 22kV
P200-089	PIVOT SPRING, 17kV & 22kV
P200-097	BUMPER, 17kV & 22kV
P200-104	CONTACT CLIP, 17kV & 22kV (PLATED)
P200-104-1	CONTACT CLIP, 17kV & 22kV (PLATED) 4 OR MORE
P200-112	STATIONARY BAR, 17kV (NO CONTACTS)
P200-113	SOLENOID, 110VAC, 17kV (NO LUGS)
P200-114	SOLENOID, 220VAC, 17kV (NO LUGS)
P200-158	TERMINAL BLOCK, 12 POLE, 17kV & 22kV
P200-159	TERMINAL BLOCK MARKER STRIP, 12 POLE, 17kV & 22kV
P200-160	TERMINAL BLOCK JUMPERS, 17kV & 22kV
P200-161	MICRO SWITCH, 17kV & 22kV
P200-194	STATIONARY BAR, 22kV (W/O CNTCTRS)
P200-195	SOLENOID, 110VAC/220VAC, 22kV (W/O CNTCTRS)
P200-198	TERMINAL BLOCK COVER PLATE, 17kV & 22kV
P200-209	CONTACTOR STAND OFFS
P210-001	LIMIT ACUTATOR SUB-ASSEMBLY
P210-002	PIVOT BAR SUB-ASSEMBLY
P210-003	PIVOT BAR SUB-ASSEMBLY, 17 kV
P210-004	BUMPER SUB-ASSEMBLY, 17 kV
P210-005	BUMPER SUB-ASSEMBLY, 22 kV

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P210-006	PIVOT SHAFT SUB-ASSEMBLY, 22 kV
P210-007	PIVOT SHAFT SUB-ASSEMBLY, 17 kV
P210-008	CONTACT GUARD W/PEM NUT
P210-009	CONTACT POST W/HRDW. 17 kV ROUND
P210-010	CONTACT POST W/HRDW. 22 kV ROUND
P210-011	SOLENOID MOUNTING BRACKET W/HRDW 17 kV
P210-012	ROLLER SHAFT ASSEMBLY
P210-013	SOLENOID COIL 110VAC W/LUGS 17kV (DEECO)
P210-014	SOLENOID COIL 220VAC W/LUGS 17kV (DECCO)
P210-015	MICRO SWITCH SUB-ASSEMBLY #1, 17 kV
P210-016	MICRO SWITCH SUB-ASSEMBLY #2, 17 kV
P210-017	MICRO SWITCH SUB-ASSEMBLY #3, 17 & 22 kV
P210-018	MICRO SWITCH SUB-ASSEMBLY #4, 17 & 22 kV
P210-019	CONTACT CLIP/GUARD SUB-ASSEMBLY W/HRDW
P210-020	SOLENOID 110VAC, 17kV (WITH MTG BRACKET)
P210-021	SOLENOID 220VAC, 17kV (WITH MTG BRACKET)
P210-111	PIVOT BAR W/(RECT.)CONTACTS, 17kV
P210-112	STATIONARY BAR W/CONTACTS, 17kV
P210-193	PIVOT BAR W/(RECT.)CONTACTS, 22kV
P210-193-HC	PIVOT BAR, 22kV (HIGH CURRENT)
P210-194	STATIONARY BAR W/CONTACTS, 22kV

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P220-001	SOLENOID REPLACEMENT KIT, 17kV (PRE. DEC. 82)
P220-003	SOLENOID REPLACEMENT KIT, 22kV
P220-004	SOLENOID REPLACEMENT KIT, (JOHNSON 145-100)
P220-005	SOLENOID REPLACEMENT KIT, (JOHNSON 145-200)
P220-006	SOLENOID REPLACEMENT KIT, (JOHNSON 145-4-2)
P220-007	CONTACTOR KIT ADAPT SPDT TO DPDT, 17kV
P220-008	CONTACTOR KIT ADAPT SPDT TO DPDT, 22kV
P220-009	CONTACTOR MOUNTING KIT
P400-310	RF INDUCTOR 20A.100uH VARIABLE
P400-311	RF INDUCTOR 20A.120uH VARIABLE
P400-312	RF INDUCTOR 20A.150uH VARIABLE
P400-401	RF INDUCTOR 30A. 7uH VARIABLE
P400-402	RF INDUCTOR 30A. 10uH VARIABLE
P400-403	RF INDUCTOR 30A. 15uH VARIABLE
P400-404	RF INDUCTOR 30A. 22uH VARIABLE
P400-405	RF INDUCTOR 30A. 28uH VARIABLE
P400-406	RF INDUCTOR 30A. 35uH VARIABLE
P400-407	RF INDUCTOR 30A. 40uH VARIABLE
P400-408	RF INDUCTOR 30A. 50uH VARIABLE
P400-409	RF INDUCTOR 30A. 78uH VARIABLE
P400-410	RF INDUCTOR 30A. 100uH VARIABLE
P400-411	RF INDUCTOR 30A. 120uH VARIABLE

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P400-412	RF INDUCTOR 30A. 150uH VARIABLE
P400-501	RF INDUCTOR 40A. 7uH VARIABLE
P400-502	RF INDUCTOR 40A. 10uH VARIABLE
P400-503	RF INDUCTOR 40A. 15uH VARIABLE
P400-504	RF INDUCTOR 40A. 22uH VARIABLE
P400-505	RF INDUCTOR 40A. 28uH VARIABLE
P400-506	RF INDUCTOR 40A. 35uH VARIABLE
P400-507	RF INDUCTOR 40A. 40uH VARIABLE
P400-508	RF INDUCTOR 40A. 50uH VARIABLE
P400-509	RF INDUCTOR 40A. 78uH VARIABLE
P400-510	RF INDUCTOR 40A. 100uH VARIABLE
P400-511	RF INDUCTOR 40A. 120uH VARIABLE
P400-512	RF INDUCTOR 40A. 150uH VARIABLE
P400-601	RF INDUCTOR 50A. 7uH VARIABLE
P400-602	RF INDUCTOR 50A. 10uH VARIABLE
P400-603	RF INDUCTOR 50A. 15uH VARIABLE
P400-604	RF INDUCTOR 50A. 22uH VARIABLE
P400-605	RF INDUCTOR 50A. 28uH VARIABLE
P400-606	RF INDUCTOR 50A. 35uH VARIABLE
P400-607	RF INDUCTOR 50A. 40uH VARIABLE
P400-608	RF INDUCTOR 50A. 50uH VARIABLE
P400-609	RF INDUCTOR 50A. 78uH VARIABLE

**PHASETEK INC.  
PARTS LIST**

<u>PART #</u>	<u>DESCRIPTION</u>
P400-610	RF INDUCTOR 50A. 100uH VARIABLE
P400-611	RF INDUCTOR 50A. 120uH VARIABLE
P400-612	RF INDUCTOR 50A. 150uH VARIABLE
P400-701	RF INDUCTOR 60A. 7uH VARIABLE
P400-702	RF INDUCTOR 60A. 10uH VARIABLE
P400-703	RF INDUCTOR 60A. 15uH VARIABLE
P400-704	RF INDUCTOR 60A. 22uH VARIABLE
P400-705	RF INDUCTOR 60A. 28uH VARIABLE
P400-706	RF INDUCTOR 60A. 35uH
P400-707	RF INDUCTOR 60A. 40uH VARIABLE
P400-708	RF INDUCTOR 60A. 50uH VARIABLE
P400-709	RF INDUCTOR 60A. 78uH VARIABLE
P400-710	RF INDUCTOR 60A. 100uH VARIABLE
P400-711	RF INDUCTOR 60A. 120uH VARIABLE
P400-201	RF INDUCTOR 15A. 7uH VARIABLE
P400-202	RF INDUCTOR 15A. 10uH VARIABLE
P400-203	RF INDUCTOR 15A. 15uH VARIABLE
P400-204	RF INDUCTOR 15A. 22uH VARIABLE
P400-205	RF INDUCTOR 15A. 28uH VARIABLE
P400-206	RF INDUCTOR 15A. 35uH VARIABLE
P400-207	RF INDUCTOR 15A. 40uH VARIABLE
P400-208	RF INDUCTOR 15A. 50uH VARIABLE

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P400-209	RF INDUCTOR 15A. 78uH VARIABLE
P400-210	RF INDUCTOR 15A.100uH VARIABLE
P400-211	RF INDUCTOR 15A.120uH VARIABLE
P400-212	RF INDUCTOR 15A.150uH VARIABLE
P400-301	RF INDUCTOR 20A. 7uH VARIABLE
P400-302	RF INDUCTOR 20A. 10uH VARIABLE
P400-303	RF INDUCTOR 20A. 15uH VARIABLE
P400-304	RF INDUCTOR 20A. 22uH VARIABLE
P400-305	RF INDUCTOR 20A. 28uH VARIABLE
P400-306	RF INDUCTOR 20A. 35uH VARIABLE
P400-307	RF INDUCTOR 20A. 40uH VARIABLE
P400-308	RF INDUCTOR 20A. 50uH VARIABLE
P400-309	RF INDUCTOR 20A. 78uH VARIABLE
P400-310	RF INDUCTOR 20A.100uH VARIABLE
P400-311	RF INDUCTOR 20A.120uH VARIABLE
P400-312	RF INDUCTOR 20A.150uH VARIABLE
P400-401	RF INDUCTOR 30A. 7uH VARIABLE
P400-402	RF INDUCTOR 30A. 10uH VARIABLE
P400-403	RF INDUCTOR 30A. 15uH VARIABLE
P400-404	RF INDUCTOR 30A. 22uH VARIABLE
P400-405	RF INDUCTOR 30A. 28uH VARIABLE

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P400-406	RF INDUCTOR 30A. 35uH VARIABLE
P400-407	RF INDUCTOR 30A. 40uH VARIABLE
P400-408	RF INDUCTOR 30A. 50uH VARIABLE
P400-409	RF INDUCTOR 30A. 78uH VARIABLE
P400-410	RF INDUCTOR 30A. 100uH VARIABLE
P400-411	RF INDUCTOR 30A. 120uH VARIABLE
P400-412	RF INDUCTOR 30A. 150uH VARIABLE
P400-501	RF INDUCTOR 40A. 7uH VARIABLE
P400-502	RF INDUCTOR 40A. 10uH VARIABLE
P400-503	RF INDUCTOR 40A. 15uH VARIABLE
P400-504	RF INDUCTOR 40A. 22uH VARIABLE
P400-505	RF INDUCTOR 40A. 28uH VARIABLE
P400-506	RF INDUCTOR 40A. 35uH VARIABLE
P400-712	RF INDUCTOR 60A. 150uH VARIABLE
P500-101	RF INDUCTOR 10A. 7uH FIXED
P500-102	RF INDUCTOR 10A. 10uH FIXED
P500-103	RF INDUCTOR 10A. 15uH FIXED
P500-104	RF INDUCTOR 10A. 22uH FIXED
P500-105	RF INDUCTOR 10A. 28uH FIXED
P500-106	RF INDUCTOR 10A. 35uH FIXED
P500-107	RF INDUCTOR 10A. 40uH FIXED
P500-108	RF INDUCTOR 10A. 50uH FIXED

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P500-109	RF INDUCTOR 10A. 78uH FIXED
P500-110	RF INDUCTOR 10A.100uH FIXED
P500-111	RF INDUCTOR 10A.120uH FIXED
P500-112	RF INDUCTOR 10A.150uH FIXED
P500-201	RF INDUCTOR 15A, 7uH FIXED
P500-202	RF INDUCTOR 15A. 10uH FIXED
P500-203	RF INDUCTOR 15A. 15uH FIXED
P500-204	RF INDUCTOR 15A. 22uH FIXED
P500-205	RF INDUCTOR 15A. 28uH FIXED
P500-206	RF INDUCTOR 15A. 35uH FIXED
P500-207	RF INDUCTOR 15A. 40uH FIXED
P500-208	RF INDUCTOR 15A. 50uH FIXED
P500-209	RF INDUCTOR 15A. 78uH FIXED
P500-210	RF INDUCTOR 15A. 100uH FIXED
P500-211	RF INDUCTOR 15A. 120uH FIXED
P500-212	RF INDUCTOR 15A. 150uH FIXED
P500-301	RF INDUCTOR 20A. 7uH FIXED
P500-302	RF INDUCTOR 20A. 10uH FIXED
P500-303	RF INDUCTOR 20A. 15uH FIXED
P500-304	RF INDUCTOR 20A. 22uH FIXED
P500-305	RF INDUCTOR 20A, 28uH FIXED

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P500-306	RF INDUCTOR 20A. 35uH FIXED
P500-307	RF INDUCTOR 20A. 40uH FIXED
P500-308	RF INDUCTOR 20A. 50uH FIXED
P500-309	RF INDUCTOR 20A. 78uH FIXED
P500-310	RF INDUCTOR 20A. 100uH FIXED
P500-311	RF INDUCTOR 20A. 120uH FIXED
P500-312	RF INDUCTOR 20A. 150uH FIXED
P500-401	RF INDUCTOR 30A. 7uH FIXED
P500-402	RF INDUCTOR 30A. 10uH FIXED
P500-403	RF INDUCTOR 30A. 15uH FIXED
P500-404	RF INDUCTOR 30A. 22uH FIXED
P500-405	RF INDUCTOR 30A. 28uH FIXED
P500-406	RF INDUCTOR 30A. 35uH FIXED
P500-407	RF INDUCTOR 30A. 40uH FIXED
P500-408	RF INDUCTOR 30A. 50uH FIXED
P500-409	RF INDUCTOR 30A. 78uH FIXED
P500-410	RF INDUCTOR 30A. 100uH FIXED
P500-411	RF INDUCTOR 30A. 120uH FIXED
P500-412	RF INDUCTOR 30A. 150uH FIXED
P500-501	RF INDUCTOR 40A. 7uH FIXED
P500-502	RF INDUCTOR 40A. 10uH FIXED
P500-503	RF INDUCTOR 40A. 15uH FIXED

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P500-504	RF INDUCTOR 40A. 22uH FIXED
P500-505	RF INDUCTOR 40A. 28uH FIXED
P500-506	RF INDUCTOR 40A. 35uH FIXED
P500-507	RF INDUCTOR 40A. 40uH FIXED
P500-508	RF INDUCTOR 40A. 50uH FIXED
P500-509	RF INDUCTOR 40A. 78uH FIXED
P500-510	RF INDUCTOR 40A.100uH FIXED
P500-511	RF INDUCTOR 40A.120uH FIXED
P500-512	RF INDUCTOR 40A.150uH FIXED
P500-601	RF INDUCTOR 50A. 7uH FIXED
P500-602	RF INDUCTOR 50A. 10uH FIXED
P500-603	RF INDUCTOR 50A. 15uH FIXED
P500-604	RF INDUCTOR 50A. 22uH FIXED
P500-605	RF INDUCTOR 50A. 28uH FIXED
P500-606	RF INDUCTOR 50A. 35uH FIXED
P500-607	RF INDUCTOR 50A. 40uH FIXED
P500-608	RF INDUCTOR 50A. 50uH FIXED
P500-609	RF INDUCTOR 50A. 78uH FIXED
P500-610	RF INDUCTOR 50A.100uH FIXED
P500-611	RF INDUCTOR 50A.120uH FIXED
P500-612	RF INDUCTOR 50A.150uH FIXED
P500-701	RF INDUCTOR 60A. 7uH FIXED

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P500-702	RF INDUCTOR 60A. 10uH FIXED
P500-703	RF INDUCTOR 60A. 15uH FIXED
P500-704	RF INDUCTOR 60A. 22uH FIXED
P500-705	RF INDUCTOR 60A. 28uH FIXED
P500-706	RF INDUCTOR 60A. 35uH FIXED
P500-707	RF INDUCTOR 60A. 40uH FIXED
P500-708	RF INDUCTOR 60A. 50uH FIXED
P500-709	RF INDUCTOR 60A. 78uH FIXED
P500-710	RF INDUCTOR 60A.100uH FIXED
P500-711	RF INDUCTOR 60A.120uH FIXED
P500-712	RF INDUCTOR 60A.150uH FIXED
P500-801	RF INDUCTOR 80A. 7uH FIXED
P500-802	RF INDUCTOR 80A. 10uH FIXED
P500-803	RF INDUCTOR 80A. 15uH FIXED
P500-804	RF INDUCTOR 80A. 22uH FIXED
P500-805	RF INDUCTOR 80A. 28uH FIXED
P500-806	RF INDUCTOR 80A. 35uH FIXED
P500-807	RF INDUCTOR 80A. 40uH FIXED
P500-808	RF INDUCTOR 80A. 50uH FIXED
P500-809	RF INDUCTOR 80A. 78uH FIXED
P500-810	RF INDUCTOR 80A. 100uH FIXED
P500-811	RF INDUCTOR 80A. 120uH FIXED

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P500-812	RF INDUCTOR 80A. 150uH FIXED
P500-1001	RF INDUCTOR 90A. 7uH FIXED
P500-1002	RF INDUCTOR 90A. 10uH FIXED
P500-1003	RF INDUCTOR 90A. 15uH FIXED
P500-1004	RF INDUCTOR 90A. 22uH FIXED
P500-1005	RF INDUCTOR 90A. 28uH FIXED
P500-1006	RF INDUCTOR 90A. 35uH FIXED
P500-1007	RF INDUCTOR 90A. 40uH FIXED
P500-1008	RF INDUCTOR 90A. 50uH FIXED
P500-1009	RF INDUCTOR 90A. 78uH FIXED
P500-1010	RF INDUCTOR 90A. 100uH FIXED
P500-1011	RF INDUCTOR 90A. 120uH FIXED
P500-1012	RF INDUCTOR 90A. 150uH FIXED
P500-1501	RF INDUCTOR 130A. 7uH FIXED
P500-1502	RF INDUCTOR 130A. 10uH FIXED
P500-1503	RF INDUCTOR 130A. 15uH FIXED
P500-1504	RF INDUCTOR 30A. 22uH FIXED
P500-1505	RF INDUCTOR 130A. 28uH FIXED
P500-1506	RF INDUCTOR 130A. 35uH FIXED
P500-1507	RF INDUCTOR 130A. 40uH FIXED
P500-1508	RF INDUCTOR 130A. 50uH FIXED

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P500-1509	RF INDUCTOR 130A. 78uH FIXED
P500-1510	RF INDUCTOR 130A.100uH FIXED
P500-1511	RF INDUCTOR 130A.120uH FIXED
P500-1512	RF INDUCTOR 130A.150uH FIXED
P600-001	RF CONTACTOR SPDT 17kV 110VAC
P600-001-2	RF CONTACTOR SPDT 17kV 220VAC
P600-002	RF CONTACTOR DPDT 17kV 110VAC
P600-002-2	RF CONTACTOR DPDT 17kV 220VAC
P600-003	RF CONTACTOR SPDT 22kV 110VAC
P600-003-2	RF CONTACTOR SPDT 22kV 220VAC
P600-004	RF CONTACTOR DPDT 22kV 110VAC
P600-004-2	RF CONTACTOR DPDT 22kV 220VAC
P600-005	RF CONTACTOR SPDT 45kV 110VAC
P600-005-2	RF CONTACTOR SPDT 45kV 220VAC
P600-006	RF CONTACTOR DPDT 45kV 110VAC
P600-006-2	RF CONTACTOR DPDT 45kV 220VAC
P600-007	RF CONTACTOR SPDT 50kV 110VAC (VACUUM)
P600-007-2	RF CONTACTOR SPDT 50kV 220VAC (VACUUM)
P600-008	RF CONTACTOR DPDT 50kV 110VAC (VACUUM)
P600-008-2	RF CONTACTOR DPDT 50kV 220VAC (VACUUM)
P600-111	LARGE COUNTER (3/8" SHAFT)
P600-111A	SMALL COUNTER (B & W) REPLCMNT, 1/4" SHAFT

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P600-111A	SMALL COUNTER ( B & W ) REPLCMNT 4 OR MORE
P600-112-1	COUPLER INSULATED 4 1/8" 15kV
P600-112-1	COUPLER INSULATED 4 1/8" 15kV (4 OR MORE)
P600-112-1B	COUPLER INSULATED 3" 15kV
P600-112-2	COUPLER INSULATED 5 1/8" 20kV
P600-112-3	COUPLER INSULATED 7 1/8" 30kV
P600-112-4	COUPLER/KNOB ASSY. 3/8" SHAFT
P600-112-5	COUPLER/KNOB ASSY. 1/2" SHAFT
P600-112-6	NON-INSULATED GANGING COUPLER
P600-112-7	INSULATED GANGING COUPLER
P600-112-8	2 1/4" KNURLED BLACK PHENOLIC KNOB
P600-121-1	RIBBON CLIP 1/4" X .054, 10A
P600-121-2	RIBBON CLIP 3/8" X .072, 15A
P600-121-3	RIBBON CLIP 1/2" X .092, 20A
P600-121-5	TUBING CLAMP 3/8", 30A
P600-121-6	TUBING CLAMP 1/2", 40A
P600-121-7	TUBING CLAMP 5/8", 50A
P600-121-8	TUBING CLAMP 3/4", 60A
P600-121-9	TUBING CLAMP 1 1/8", 90A
P600-121-10	TUBING CLAMP 1 5/8", 130A
P600-121-11	TUBING CLAMP 2", 160A
P600-121-12	TUBING CLAMP 2 1/2", 200A

**PHASETEK INC.  
PARTS LIST**

<u>PART #</u>	<u>DESCRIPTION</u>	
P600-121-13	TUBING CLAMP 3/8", 80A	
P600-122-1	TRAP 1/2" SILVER PLATED COPPER	(PER FT.)
P600-122-2	STRAP 3/4" SILVER PLATED COPPER	(PER FT.)
P600-122-3	STRAP 1" SILVER PLATED COPPER	(PER FT.)
P600-122-4	TUBING 3/8" SILVER PLATED COPPER	(PER FT.)
P600-122-5	TUBING 1/2" SILVER PLATED COPPER	(PER FT.)
P600-122-6	TUBING 5/8" SILVER PLATED COPPER	(PER FT.)
P600-122-7	TUBING 3/4" SILVER PLATED COPPER	(PER FT.)
P600-122-8	STRAP 1/2" TIN PLATED COPPER	(PER FT.)
P600-122-9	STRAP 3/4" TIN PLATED COPPER	(PER FT.)
P600-122-10	STRAP 1" TIN PLATED COPPER	(PER FT.)
P600-122-11	TUBING 3/8" TIN PLATED COPPER	(PER FT.)
P600-122-12	TUBING 1/2" TIN PLATED COPPER	(PER FT.)
P600-122-13	TUBING 5/8" TIN PLATED COPPER	(PER FT.)
P600-122-14	TUBING 3/4" TIN PLATED COPPER	(PER FT.)
P600-123-2	#10 SOFT-DRAWN COPPER WIRE	(PER FT.)
P600-123-3	COPPER STRAP 2" X .032"	(PER FT.)
P600-123-4	COPPER STRAP 3" X .032"	(PER FT.)
P600-123-5	COPPER STRAP 4" X .032"	(PER FT.)
P600-123-6	COPPER STRAP 6" X .032"	(PER FT.)
P600-123-7	COPPER STRAP 8" X .032"	(PER FT.)

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P600-123-8	#8/3 CONDUCTOR W/GR, DIR. BURIAL (PER FT.)
P600-123-9	#18/12 CONDUCTOR, DIRECT BURIAL (PER FT.)
P600-123-10	#22/24 CONDUCTOR CABLE W/SHIELD (PER FT.)
P600-125-1	REMOTE PICK-UP UNIT
P600-126-1	LINE TERMINATION CLAMP "L" 1/2"
P600-126-2	LINE TERMINATION CLAMP "L" 7/8"
P600-126-3	LINE TERMINATION CLAMP "L" 5/8"
P600-126-4	LINE TERMINATION CLAMP "L" 1 1/4"
P600-126-1Z	LINE TERMINATION CLAMP "Z" 1/2"
P600-126-2Z	LINE TERMINATION CLAMP "Z" 7/8"
P600-126-3Z	LINE TERMINATION CLAMP "Z" 1 5/8"
P600-126-4Z	LINE TERMINATION CLAMP "Z" 1 1/4"
P600-127-1	TOWER LIGHT SAMPLING UNIT
P600-130-1	CERAMIC INSULATOR 3/4" X 3" W/HRDW
P600-130-2	CERAMIC INSULATOR 3/4" X 4" W/HRDW
P600-130-3	CERAMIC INSULATOR 3/4" X 6" W/HRDW.
P600-130-4	CERAMIC INSULATOR 1" X 1 1/4" W/HRDW.
P600-130-5	CERAMIC INSULATOR 1" X 2 1/2" W/HRDW.
P600-130-6	CERAMIC INSULATOR 1" X 3" W/HRDW.
P600-130-7	CERAMIC INSULATOR 1" X 3 1/2" W/HRDW.
P600-130-8	CERAMIC INSULATOR 1" X 4" W/HRDW.
P600-130-9	CERAMIC INSULATOR 1" X 5" W/HRDW.

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P600-130-10	CERAMIC INSULATOR 1" X 6" W/HRDW.
P600-130-11	CERAMIC INSULATOR 1 1/4" X 9" W/HRDW
P600-130-12	12" GPO COIL MOUNTING PLATE SET
P600-130-13	16" GPO COIL MOUNTING PLATE SET
P600-130-14	20" GPO COIL MOUNTING PLATE SET
P600-130-H1	HARDWARE FOR 3/4" INSULATOR
P600-130-H2	HARDWARE FOR 1" AND 1 1/4" INSULATORS
P600-131-1	HARDWARE KIT
P600-140-1	J-PLUG, 30A. (STANDARD JACK)
P600-140-2	METER PLUG-IN, 30A.
P600-140-3	SHORTING BAR, 30A.
P600-140-4	HOTLINE JACK, 60A.
P600-140-5	HOTLINE METER PLUG-IN
P600-140-6	HOTLINE BRIDGE PLUG-IN
P600-140-7	3 TERMINAL J--PLUG, 30A.
P600-140-8	J-PLUG, 60A. (STANDARD JACK)
P600-140-9	METER PLUG-IN, 60A.
P600-140-10	SHORTING BAR, 60A.
P600-140-11	3 TERMINAL J-PLUG, 60A.
P600-140-12	HOTLINE JACK METER PLUG-IN, EXTENDED
P600-140-13	HOTLINE JACK BRIDGE PLUG-IN EXTENDED

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P600-140-14	J-PLUG MOUNTING SHELF ASSY., 30A.
P600-140-15	3 TERMINAL J-PLUG SHELF ASSY., 30A.
P600-140-16	HOTLINE JACK MOUNTING SHELF ASSY.
P600-150-1	SWITCH DPDT, 30A.
P600-150-2	SWITCH/METER MOUNTING FOR 30A., SWITCH
P600-155-2	SAMPLING LOOP 12" W. X 48" L. S.S.
P600-155-4	SAMPLING LOOP 12" W. X 91" L. S.S.
P600-155-5	INSULATED MOUNTING BRACKET KIT
P600-155-6	NON-INSULATED MOUNTING BRACKET KIT
P600-155-7	INSULATED SAMPLING LINE CABLE SUPPORT
P600-155-8	SAMPLING LOOP SHORTING BAR
P600-155-9	LOOP CONNECTOR ASSY., UHF
P600-155-10	LOOP CONNECTOR ASSY., "N"
P600-155-A38	150uH ISOLATION INDUCTOR, 3/8" LINE
P600-155-A12	150uH ISOLATION INDUCTOR,
P600-155-B38	85uH ISOLATION INDUCTOR, 3/8" LINE
P600-155-B12	85uH ISOLATION INDUCTOR, 1/2" LINE
P600-155-C	ISOLATION COIL INSTALLATION KIT
P600-155-D	24" X 30" ALUMINUM MOUNTING PANEL
P600-155-E	30" W. X 30" D. X 36" H. WEATHERPROOF CABINET
P600-160-1-10	DOUBLE WOUND LIGHTING CHOKE, 25A, #10AWG
P600-160-1-12	DOUBLE WOUND LIGHTING CHOKE, 20A, #12AWG

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P600-160-2-10	TRIPLE WOUND LIGHTING CHOKE, 25A, #10AWG
P600-160-2-12	TRIPLE WOUND LIGHTING CHOKE, 20A, #12AWG
P600-160-3	LIGHTING CHOKE WEATHERPROOF HOUSING
P600-160-4	LIGHTING CHOKE CAPACITOR, .01uf, 1500V
P600-160-5	LIGHTING CHOKE CAPACITOR, .01uf, 2500V
P600-161-1	STATIC DRAIN CHOKE 500-850kHz 5" DIA.
P600-161-2	STATIC DRAIN CHOKE 860-1200kHz 4" DIA.
P600-161-3	STATIC DRAIN CHOKE 1210-1600kHz 3" DIA.
P600-161-4	H.V. STATIC DRAIN CHOKE 500-1600kHz 5" DIA.
P600-170-1	BOWL STUD HORN GAP
P600-170-2	HORN GAP, 1-10kW
P600-170-3	HORN GAP, 50kW
P600-170-4	TRANSMISSION LINE HORN
P600-180	SINGLE BOWL KIT, CONVERTS SINGLE TO DOUBLE
P600-180-1	SINGLE BOWL ASSY. W/12" SOLID STUD
P600-180-2	SINGLE BOWL ASSY. W/12" HOLLOW STUD
P600-180-3	SINGLE BOWL ASSY. W/18" SOLID STUD
P600-180-4	SINGLE BOWL ASSY. W/18" HOLLOW STUD
P600-180-5	DOUBLE BOWL ASSY. W/24" SOLID STUD
P600-180-6	DOUBLE BOWL ASSY. W/24" HOLLOW STUD
P600-180-7	DBL CERAMIC BOWL ASSY. W/5" 1/4-20 SOLID STUD

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P600-180-8	5" CERAMIC BOWL ASSY. W/8" SOLID STUD
P600-180-9	5" CERAMIC BOWL ASSY. W/8" HOLLOW STUD
P600-180-10	12" X 12" ALUMINUM MOUNTING PLATE
P600-180-11	12" X 12" INSULATED PLATE W/BOWL MOUNTING
P600-185-1	1.6kW DUMMY LOAD
P600-185-2	8kW DUMMY LOAD (W/MATCHING NETWORK)
P600-185-3	16kW DUMMY LOAD (W/ MATCHING NETWORK)
P600-185-4	50kW DUMMY LOAD (W/ MATCHING NETWORK)
P600-185-5	80kW DUMMY LOAD (W/ MATCHING NETWORK)
P600-190-1	WEATHERPROOF CABINET 24" W. X 24" D. X 24" H.
P600-190-2	WEATHERPROOF CABINET 34" W. X 25" D. X 36" H.
P600-190-3	WEATHERPROOF CABINET 40" W. X 30" D. X 40" H.
P600-190-4	WTHRPRF. CABINET 66" W.X 30" D. X 40" H. SECT.
P600-195-DPS	24 VDC DUAL POWER SUPPLY, 3 ½" RACK MOUNT
P600-195-1	MAIN/AUX CONTROL PANEL W/REMOTE OUTPUT
P600-195-OP2	OVER POWER UNIT, 2 MODES
P600-195-OP3	OVER POWER UNIT, 3 MODES
P600-201	TOROIDAL CURRENT TRANS. 0.25V/A, 0-80A.
P600-202	TOROIDAL CURRENT TRANS. 0.50V/A, 0-40A.
P600-206-1L	VOLTAGE SAMPLING UNIT 500-670 kHz
P600-206-1H	VOLTAGE SAMPLING UNIT 680-850 kHz
P600-206-2L	VOLTAGE SAMPLING UNIT 860-1050 kHz

**PHASETEK INC.  
PARTS LIST**

<u>PART #</u>	<u>DESCRIPTION</u>
P600-206-2H	VOLTAGE SAMPLING UNIT 1060-1200 kHz
P600-206-3L	VOLTAGE SAMPLING UNIT 1210-1400 kHz
P600-206-3H	VOLTAGE SAMPLING UNIT 1410-1600 kHz
P600-203	TOROIDAL CURRENT TRANS. 1.00V/A, 0-20A.
P600-204	TOROIDAL CURRENT TRANS. 1.50V/A, 0-10A.
P600-205	TOROIDAL CURRENT TRANS. 1.00/2.00 V/A
P600-210-500	500 W ATU, WEATHERPROOF CABINET ( <b>SERIES FEED</b> )
P600-210-1k	1kW ATU, WEATHERPROOF CABINET ( <b>SERIES FEED</b> )
P600-210-1k-SH	1kW ATU, WEATHERPROOF CABINET ( <b>SHUNT FEED</b> )
P600-210-2.5k	2.5kW ATU, WEATHERPROOF CABINET ( <b>SERIES FEED</b> )
P600-210-2.5k-SH	2.5kW ATU, WEATHERPROOF CABINET ( <b>SHUNT FEED</b> )
P600-210-5k	5kW ATU, WEATHERPROOF CABINET ( <b>SERIES FEED</b> )
P600-210-5k-SH	5kW ATU, WEATHERPROOF CABINET ( <b>SHUNT FEED</b> )
P600-210-10k	10kW ATU, WEATHERPROOF CABINET ( <b>SERIES FEED</b> )
P600-210-10k-SH	10kW ATU, WEATHERPROOF CABINET ( <b>SHUNT FEED</b> )
P600-210-25k	25kW ATU, WEATHERPROOF CABINET ( <b>SERIES FEED</b> )
P600-210-25k-SH	25kW ATU, WEATHERPROOF CABINET ( <b>SHUNT FEED</b> )
P600-210-50k	50kW ATU, WEATHERPROOF CABINET ( <b>SERIES FEED</b> )
P600-210-50k-SH	50kW ATU, WEATHERPROOF CABINET ( <b>SHUNT FEED</b> )
P600-220-1	4:1 TRANSFORMER, 300 W. RMS
P600-220-1HP	4:1 TRANSFORMER, 1000 W. RMS

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P600-220-2	9:1 TRANSFORMER, 200 W. RMS
P600-220-2HP	9:1 TRANSFORMER, 750 W. RMS
P600-305-1	¼" GALVANIZED CABLE, PER FT.
P600-305-2	½" GALVANIZED TURNBUCKLE, EYE/JAN
P600-305-3	CABLE CLAMP, ¼"
P600-305-4	INSULATOR (STRAIN) 15kV
P600-305-5	SUPPORT ARM ASSEMBLY W/U-BOLTS
P600-305-6	CENTER INSULATOR STANDOFF
P600-305-7	5/16" GALVANIZED CABLE, PER FT.
P600-305-7	CABLE CLAMP, 5/16"
P600-401	ISOCOUPLER, 145-180MHz 120W.
P600-402	ISOCOUPLER, 450-470MHz 120W.
P600-402	HVISOCOUPLER, 450-470MHz 120W. HIGH VOLTAGE
P600-403	ISOCOUPLER, 850-1000MHz 120W.
P600-403 HV	ISOCOUPLER, 850-1000MHz 120W. HV
P600-404	ISOCOUPLER, 88-108MHz 1kW.
P600-405	ISOCOUPLER, 88-108MHz 10kW.
P600-406	ISOCOUPLER, 450-470MHz 175W.
P600-407	ISOCOUPLER, 850-1000MHz 175W.
P600-501-250	PWR REDUCTION UNIT 250W. MTPL. OUTPUT PWR.
P600-502-250	PWR REDUCTION UNIT 250W. (1) OUTPUT PWR.
P600-502-500	PWR REDUCTION UNIT 500W. (1) OUTPUT PWR.

**PHASETEK INC.  
PARTS LIST**

<b><u>PART #</u></b>	<b><u>DESCRIPTION</u></b>
P600-501-1000	PWR REDUCTION UNIT 1kW. MTPL. OUTPUT PWR.
P600-502-1000	PWR REDUCTION UNIT 1kW. (1) OUTPUT PWR.
RT-351-1	METER, 0-1 AMP.
RT-351-1.5	METER, 0-1.5 AMP.
RT-351-2	METER, 0-2 AMP.
RT-351-3	METER, 0-3 AMP.
RT-351-4	METER, 0-4 AMP.
RT-351-5	METER, 0-5 AMP.
RT-351-8	METER, 0-8 AMP.
RT-351-10	METER, 0-10 AMP.
RT-351-15	METER, 0-15 AMP.
RT-351-20	METER, 0-20 AMP.
RT-351-500	METER, 0-500 AMP.